

## ViewPad 10 Touch Panel Firmware Update Procedure

Equipment required: USB Mouse, USB Keyboard (optional)


1. Make sure the AC Adapter is connected to the ViewPad 10 during the firmware update to prevent power loss.
2. Plug the USB Mouse (and USB Keyboard).
3. Boot the ViewPad 10 in Windows 7 mode. Extract the firmware zip file to a folder on the desktop.
4. Open the folder and find HID\_GUI\_V1.2.exe. Right-click on the executable and select "Run as Administrator". A "User Account Control" dialog box will appear. Click "Yes" to allow the change then you will see the screen below:



5. Under EEPROM download, click OPEN and the tool will automatically browse to a folder to include a file named "Hanvon10p1\_v89r1003b1\_1D\_20110310\_HC.eep.pix".




6. Double click **Hanvon10p1\_v89r1003b1\_1D\_20110310\_HC.eep.pix**, you will see it is added to the dialog box of the updating tool. **DO NOT** click any button at this time.

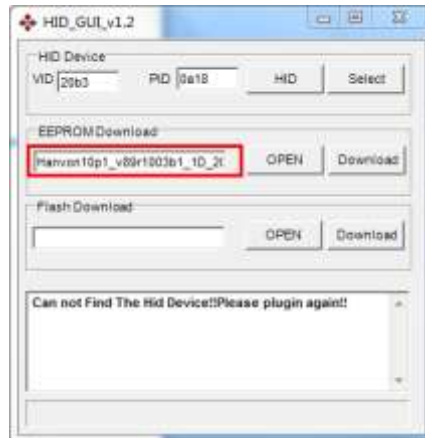


7. Open **Device Manager**, on the expanded list of **Other Devices**, right click **Touch**, then click **Update Driver Software**



8. On the dialog box, choose **Browse my Computer for driver software**

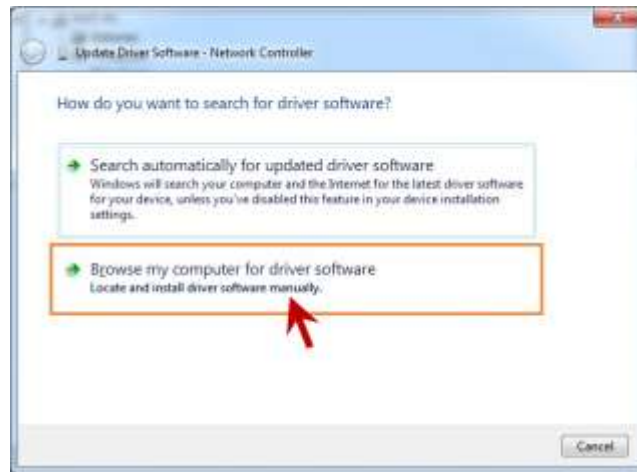


9. Click **Browse**, and find ...\Update FW Tool\USB\_Driver, choose it then click **OK**

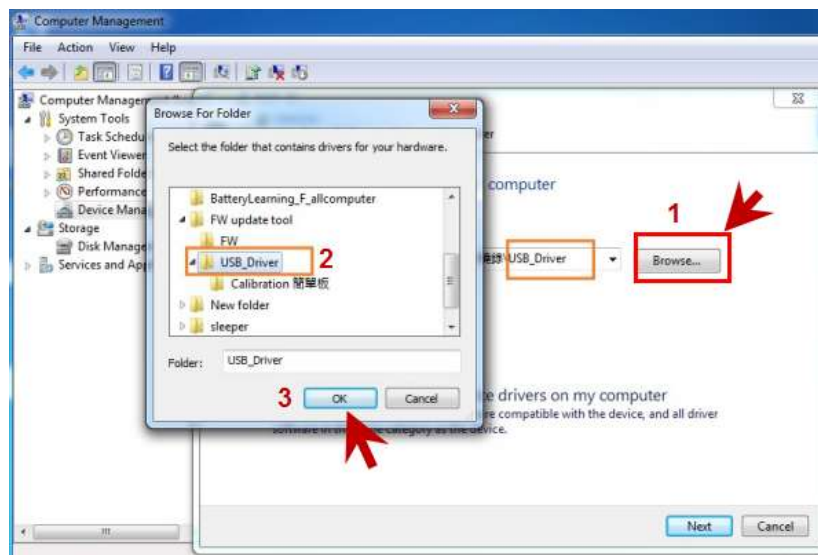

10. On the succeeding Dialog Box, click "Always install this software".


11. Check Device Manager, you can see the driver is successfully installed.

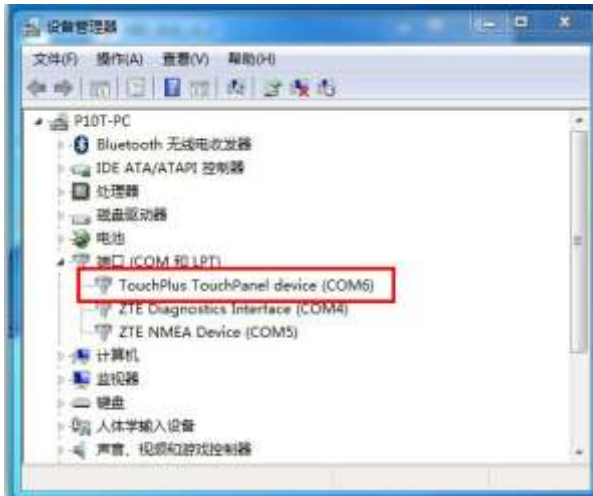

12. After driver installed, the font of **Download** in below dialog box will turn red. Now, click **Download** to start updating FW.



13. After the FW is updated successfully, you will see **EEP Pix File download: Success!!** in the dialog box.

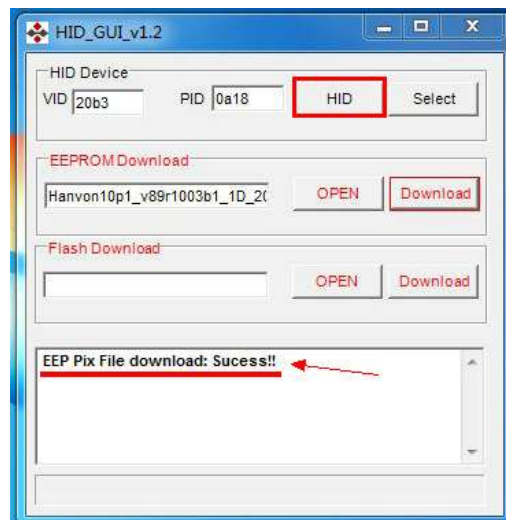

14. Click **HID**. After HID is clicked, you will see **Hid Version = 3893** in the dialog box, which means FW updating is done.



15. Close tool.